

INSTALLATION, OPERATION & MAINTENANCE MANUAL

PLASMA AIR MODEL 160, 260 SERIES (MODELS 161, 261, 162, 262, 163, 263)

REV 06/2011



INTRODUCTION

Plasma Air models 161, 261, 162, 262, 163, 263 air ion generators are single tube (160) and two-tube (260) commercial quality units which include a monitoring circuit intended for installation in air handling units (AHU), furnaces, or duct systems for commercial applications.

This ionization equipment is effective in reducing harmful pollutants and odors by introducing positive and negative ions into the system airflow. The number of units and the size of the ionization tubes are dependent on the airflow in the system and the severity of the pollution problem.

MECHANICAL INSTALLATION INSTRUCTIONS

GENERAL MOUNTING LOCATION CRITERIA:

Warning: To reduce the risk of fire, this unit should not be installed downstream of a humidifier or exposed to other sources of moisture.

Caution: This product is suitable for mounting into duct of metallic construction only. Installation must be such that the structural integrity of the ducting is not compromised.

Mount units to allow access to the ionization level adjustment knob and for general maintenance. This product shall not be installed under a suspended floor or behind a structural wall, ceiling, or floor.

This product should not be mounted in a location where the air temperature exceeds 140° F. This usually means that it should not be installed at the outlet of a gas or oil fired furnace.

- 1) Screw the ionization tube(s) into the back of the ionizer while gently holding the grounding clip away from the tube.
- 2) The preferred location is in the supply air duct leaving the AHU. Be sure to pick a location before any branch duct take-offs. Verify that there is sufficient duct depth to allow clearance for the tube – see figure 1.


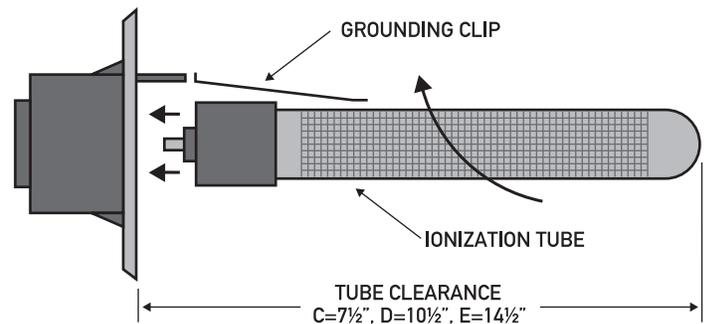


FIGURE 1 – MODEL 100 AND IONIZATION TUBE

To mount the units in a duct:

- a) Trace a 5" by 5" square on the surface of the duct onto which you are mounting the ionizer. The units have a flange gasket that forms a seal between the duct and the mounting plate.
- b) Cut out the traced portion of the duct using snips or sheet metal shears.
- c) Screw the ionizer onto the duct using sheet metal screws.

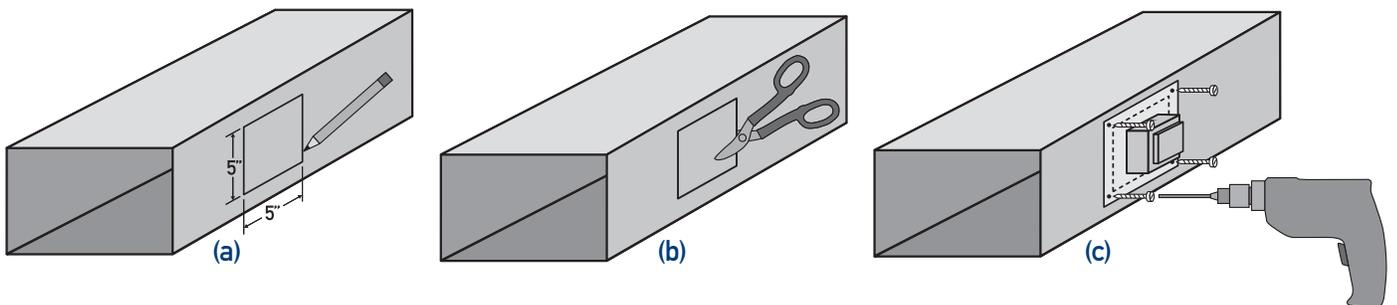

- 3) If the unit cannot be installed in the preferred location due to space or temperature limitations, see Figure 2 for alternate locations. Units can be installed using "L" shaped brackets available from many hardware suppliers or by cutting a hole in the AHU or furnace casing.
- 4) If the supply air duct is not easily accessible for tube replacement or other service, the ionizers can be mounted inside an AHU or roof top unit using an "L" shaped bracket available from many hardware suppliers. Be sure to select a location within the air handling unit where there is good air flow. One such location is immediately next to the fan inlet.

Mounting location notes:

- Ensure sufficient airflow over the ionization tubes.
- Do not mount the units before the system filter.
- Do not mount downstream of a gas or oil fired furnace.
- Avoid locations where moisture may be present like downstream of a cooling coil.

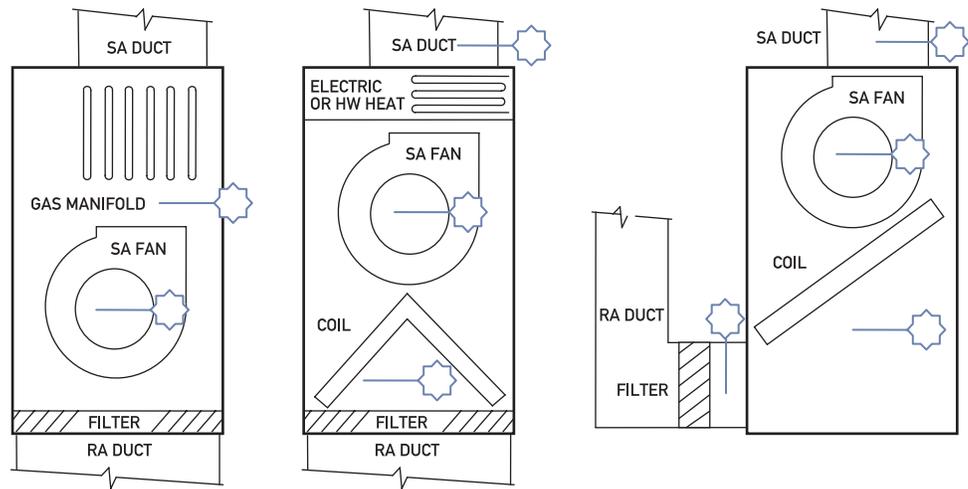


FIGURE 2 - SUGGESTED MOUNTING LOCATIONS IN A TYPICAL AHU OR FURNACE

ELECTRICAL INSTALLATION INSTRUCTIONS

Warning: The secondary voltage at the ionizing tubes can be 2,900 Volts AC. Do not connect to power before the installation is complete. Always disconnect power to the unit before handling any of the unit components.

To reduce the risk of electric shock, this equipment has a grounding type plug that has a third (grounding) pin. This plug will only fit into a grounding type power outlet. If the plug does not fit into the outlet, contact qualified personnel to install the proper outlet. Do not alter the plug in any way.

- 1) Models 160, 260 are available in three (3) primary voltage models, nominally 120 volts AC (models 161, 261), 230 volts AC (models 162, 262), or 24 volts AC (models 163, 263). The units may be used on 50 cycle or 60 cycle frequencies. Verify that the model 100's voltage is the same as the available voltage by checking the label on the unit.
- 2) The typical model 160 draws about 10 watts and the 260 draws about 20 watts. The power source should not be protected by a breaker exceeding 20 amps.
- 3) The unit should be powered when the system supply fan is energized. This can be accomplished by any of the following methods:
 - On systems with single speed supply fans, the fan power supply can be used.
 - Use an airflow switch in series with the unit's power supply.
 - Install a relay off the 24 volt fan control circuitry and wire the unit's power wiring through the NO contacts.
 - Install a supply fan power current sensing relay and wire the unit's power wiring through the NO contacts.
 - Wire into the "EC" (Electronic Air Cleaner) contacts provided on the AHU.
 - On systems where the above fan interlocking options are not available, contact your distributor/rep or Plasma Air directly for an AFS-MF or AFS-MF-JB accessory. These products consist of a mounting frame with an integral pressure differential switch that allows the unit to be plugged into any 120 volt receptacle or directly wired into the junction box (JB).

OPERATION

The ionization adjustment knob is a six-position switch that is used to turn the unit on and adjust the level of ionization.

- 1) When the knob is in the "0" position, no power is being applied to the ionization tube and the green light is off. Rotating the knob from "0" through "5" increases the ionization output and will illuminate the green light.
- 2) The ionization level is set by the installing contractor and does not require adjustment on a regular basis.
- 3) The benefit of the ionization system is only realized when the supply fan is running. So to achieve improved air quality, run the fan continuously or use an IAQ type thermostat which will cycle the fan once or several times an hour at specified times of the day.

MAINTENANCE

Warning: The secondary voltage to the ionizing tubes can be 2,900 Volts AC. Always disconnect power to the unit and switch the power to the “off” position before performing any maintenance.

Tubes are rated for approximately three (3) years of service and should be replaced at that interval. Contact your local Plasma Air Distributor/Dealer to purchase replacement tubes, www.plasma-air.com.

TROUBLESHOOTING

If the unit is not working, check in the following order that:

- 1) The ionization adjustment knob is in between “1” and “5” and that the green light illuminates.
- 2) The 0.5 Amp (models 161, 261), 1.0 Amp (models 162, 262), or 3.0 Amp (models 163, 263) glass cartridge fuse is not blown. The fuse is located under the power cord. The fuses are 5mm x 20mm rated at 250 Volts and are available at any electrical supply store.
- 3) If the unit fuse is blown, remove the tube and replace the fuse. Turn on power to the unit **without the tube installed**. If the fuse blows again, return the unit to the distributor for factory service.
- 4) If the fuse does not blow, the most likely problem is a defective tube. Carefully inspect the tube for cracks. Although rare, cracks are usually found at the capped end of the tube.
- 5) If the tube has been subjected to high temperatures, above 140° F, there is a possibility of a pin hole. These are difficult to spot, but can cause shorting of the tube. Install the tube into the unit and power the unit. If the fuse blows, the tube is defective and requires replacement.
- 6) If the tubes are old and worn, replace them.

MONITORING CIRCUIT

Plasma Air provides a monitoring circuit to verify the proper operation of its Ionization Units. The circuit consists of a relay with isolated normally closed contacts. The contacts remain closed whenever the ionization unit is not powered or if there is a fault in the equipment. The contacts open whenever the unit is energized.

Sequence of Operation

The building energy management system (EMS) controls the start/stop of the air conditioning unit supply fan. After a 1 minute time delay on a call for supply fan operation, the EMS poles the ionization unit. Closed contacts indicate a fault; open contacts indicate normal operation.

EMS Field Wiring Connections

Plasma Air Models 161, 261, 162, 262, 163 and 263 units:

A miniature double banana plug with set screws is provided on the face of the equipment for field wiring of the monitoring circuit. See figure 3 below.

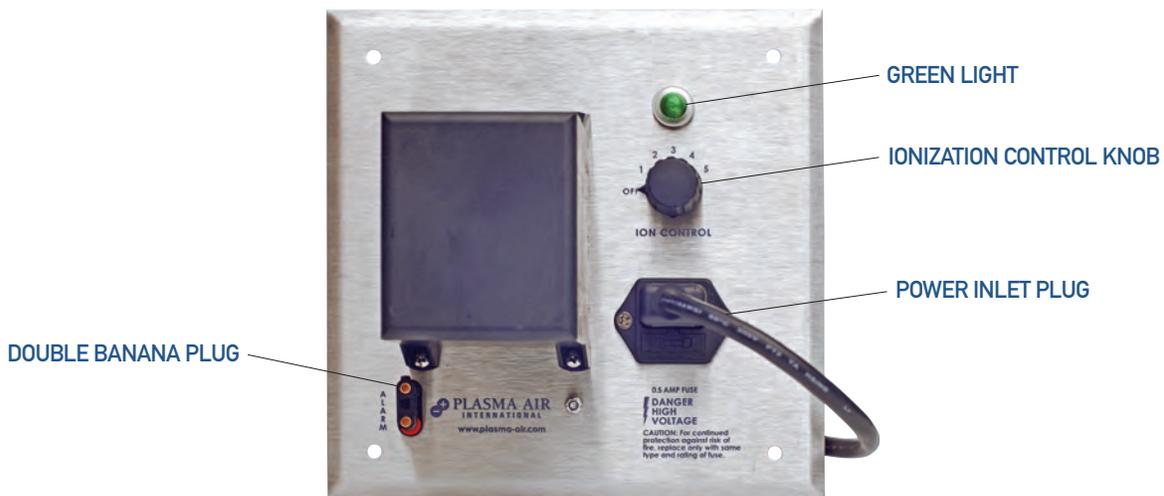


FIGURE 3 – MODELS 161, 261, 162, 262, 163 and 263



Intertek